NOTES

1. TUBESTOCK PLANTS TO BE MINIMUM 140 TO 200mm POTS AT THE TIME OF PLANTING.
2. ALL PLANTS ARE TO BE MADE AVAILABLE FOR INSPECTION BY THE SHIRE'S ARBORIST / SUPERINTENDENT PRIOR TO PLANTING.
3. ALL PLANTS OF POOR FORM AND / OR WHICH ARE ROOT BOUND WILL NOT BE ACCEPTED.
4. PLANT SPECIES AND PLANTING LOCATIONS SHALL BE CONFIRMED WITH THE SUPERINTENDENT PRIOR TO PLANTING AND IN ACCORDANCE WITH THE APPROVED LANDSCAPE PLAN OR PLANTING PROGRAM.
4. ALL PLANTS ARE TO BE WATERED IN WITH A SOLUTION OF LIQUID FERTILISER, SOIL WETTING AGENT AND WATER (AT THE MANUFACTURERS SPECIFICATIONS) IMMEDIATELY AFTER PLANTING, ENSURING THE ROOT BALL AND SURROUNDING SOIL IS FULLY SATURATED.

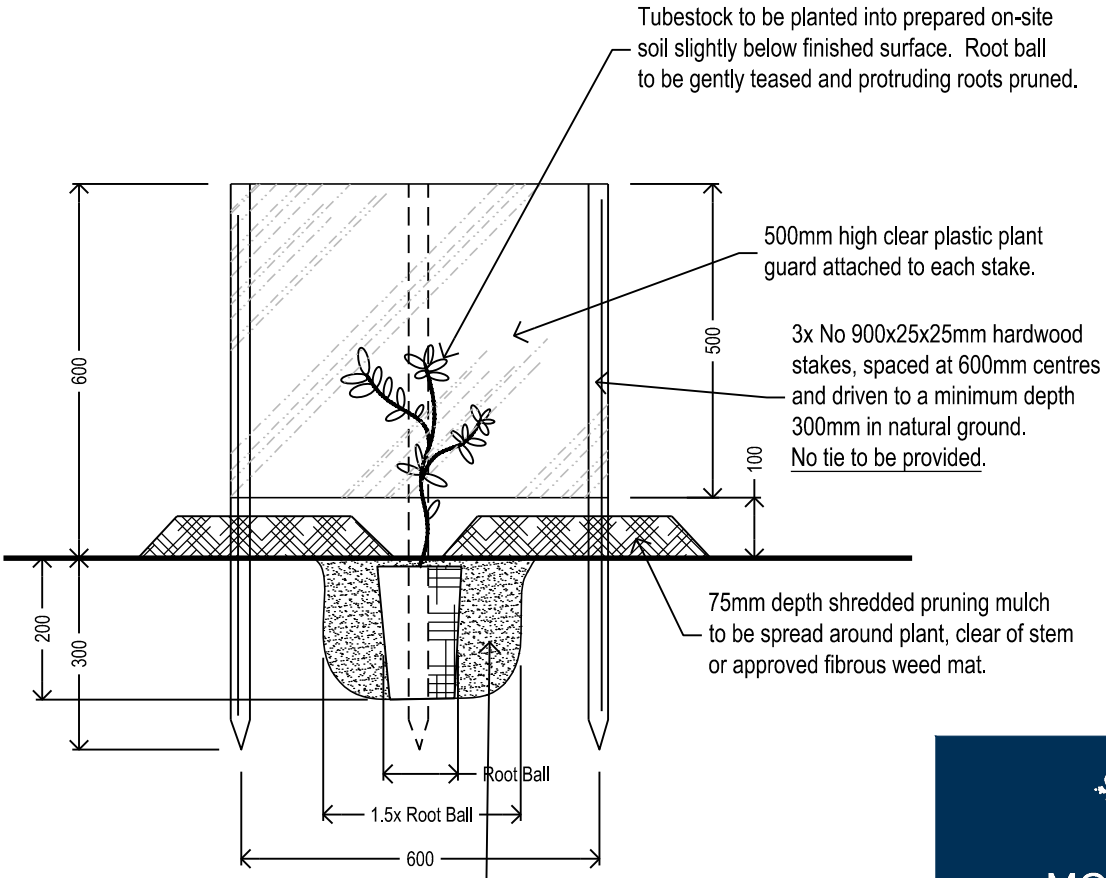


## TYPICAL SECTION

Not to Scale

MORNINGTON PENINSULA Shire

# STANDARD PLAN

## TUBESTOCK TREE PLANTING DETAIL

MANAGER - INFRASTRUCTURE PROJECTS

**DATE OF ISSUE** 10/01/2025

**SHEET NO** 1 OF 1

MP816